



BT01

Battery Tester (For AAA, AA, C & D Type Batteries)

TECHNICAL SPECIFICATIONS

GENERAL



- Suitable for testing AAA, AA, C & D type batteries (rechargeable or non-rechargeable).
- Can also test standard 9 volt (1604, 522, 6LR61) batteries.
- Easy to use.
- Just place battery between base contact point and the extending arm contact point.
- Ensure the +ve (button) end of the battery touches the extending arm contact point and the -ve (flat base) end of the battery touches the lower contact point of the battery tester.
- See photo for typical use.
- Needle moves to show battery condition.
- Perfect for solar light battery testing and troubleshooting.
- Batteries not included.

One Year*
Warranty ✓

Low Price
Guarantee ✓

No Hassle*
Returns ✓

Worldwide
Shipping ✓

Lifetime
Tech Support ✓

5611 Halifax Avenue • Fort Myers • FL • 33912 • USA • Phone: 239-461-5522 • Fax: 239-337-7887

MONDAY - FRIDAY 10.00AM - 4.00PM (US EASTERN TIME)

www.solarilluminations.com • sales@solarilluminations.com